2013 CA RESIDENTIAL CODE

R703.6

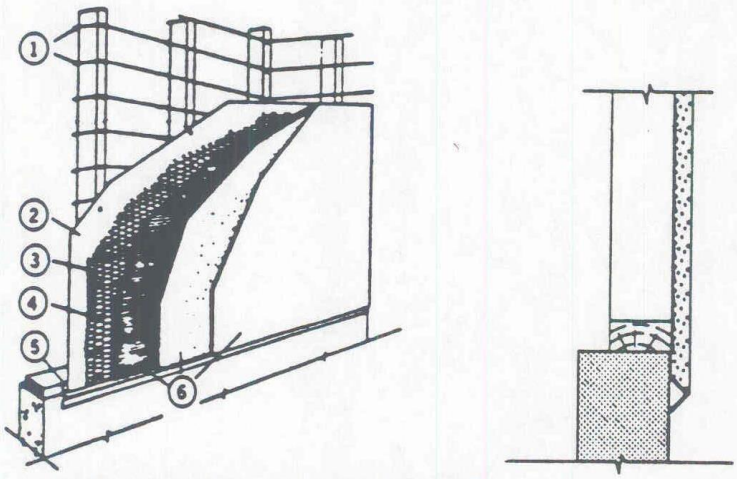

OPEN WOOD-FRAME CONSTRUCTION

(1) Wire Backing[1]
(2) Building Paper[1]
(3) Wire Fabric Lath[1]
(4) Furring Nails[2]
(5) Drip Screed[3]
(6) Three Coats of Plaster (Scratch, Brown, Finish)

[1]Paper-backed wire fabric lath may be used omitting separate wire and paper.
[2]Self-furring lath may be used.
[3]Should be used with on-grade slab construction.

NOTE: Use control joints whenever possible.

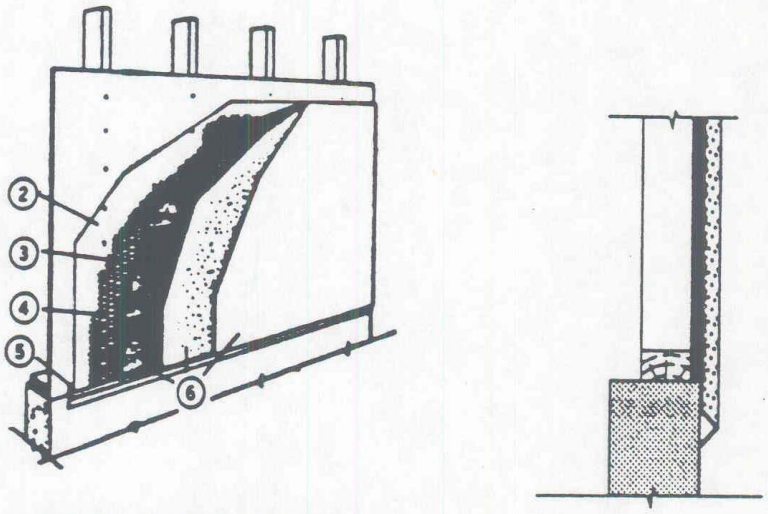

SHEATHED WOOD-FRAME CONSTRUCTION

LATH AND PLASTER APPLICATION TO EXTERIOR WOOD STUD WALLS